

# ClearSonic Bass Trap Installation Instructions

Recommended tools: Staple Gun




1. Hold the STC412 SORBER Baffle in position and mark the edges with a pencil.



2. Using a staple gun, attach (3) pieces of velcro evenly spaced along each side.




3. Mount the STC412 to the velcro.

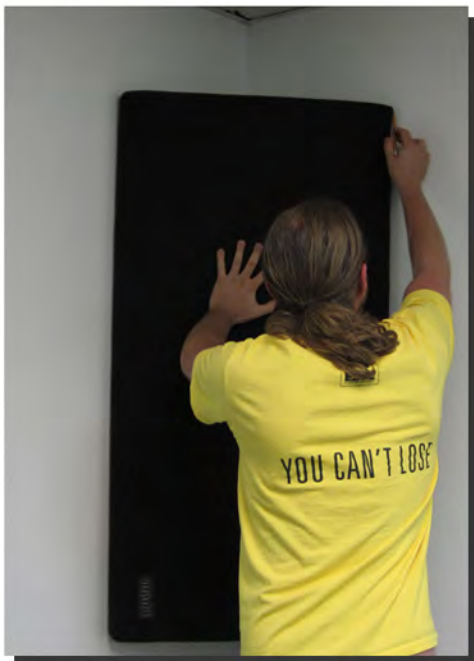

4. Hold the STC4 baffle in place on top of the STC412. Mark the edges with a pencil.



5. Staple the remaining velcro strips along each side.

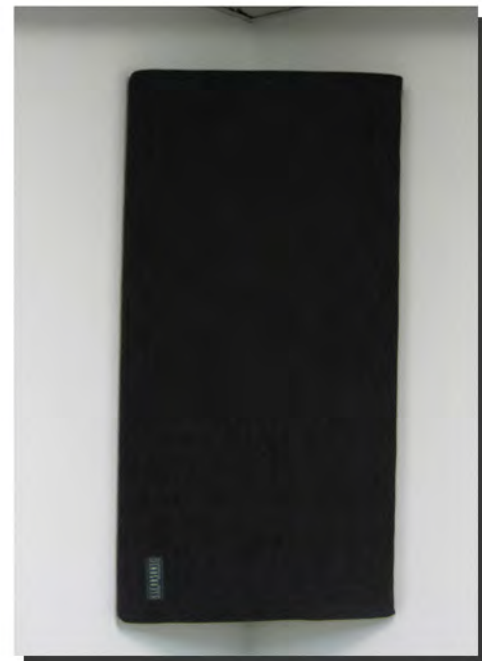

6. Mount the STC4 to the velcro to complete the Bass Trap.

## Overhead View



Please contact us at 1-800-888-6360 should you have any questions.



[www.clearsonic.com](http://www.clearsonic.com)