

ClearSonic SORBER Wall Installation Instructions


Recommended tools: Staple Gun, Measuring Tape



1. Hold the S2 SORBER Baffle in position and mark the edge and corner with a pencil.



2. Using a staple gun, attach a piece of velcro in the marked corner.

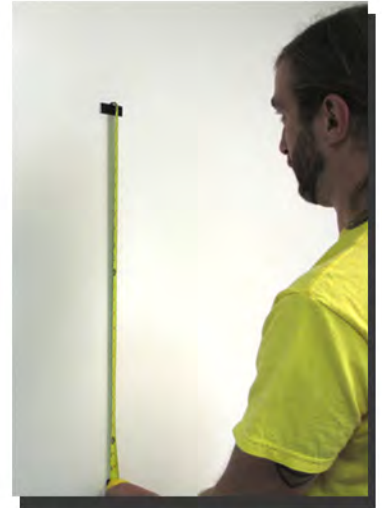

3. Measure 18" down from the velcro. Mark and staple another velcro strip.



4. Starting from the first velcro piece, measure across 18".



5. Mark and staple the 3rd velcro strip.



6. Measure 18" down from the 3rd velcro strip. Mark and staple the final velcro.



7. Line up the S2 using the pencil marks and apply the baffle to the velcro.

Please contact us at 1-800-888-6360 should you have any questions.



www.clearsonic.com